

ZT HD Pro-Turn Z / ZX

Operator's Manual
Manuel de l'utilisateur



Models

991266 – ZT HD 44
(SN 020000 +)

991268 – ZT HD 48
(SN 020000 +)

991270 – ZT HD 52
(SN 020000 +)

991271 – ZT HD 52
(SN 020000 +)

991272 – ZT HD 60
(SN 020000 +)

991274 – ZT HD 48
(SN 020000 +)

991276 – ZT HD 52
(SN 020000 +)

991278 – ZT HD 60
(SN 020000 +)

991280 – Pro-Turn Z 48
(SN 020000 +)



991282 – Pro-Turn Z 52
(SN 020000 +)

991284 – Pro-Turn Z 60
(SN 020000 +)

991286 – Pro-Turn ZX 48
(SN 020000 +)

991288 – Pro-Turn ZX 52
(SN 020000 +)

991290 – Pro-Turn ZX 60
(SN 020000 +)

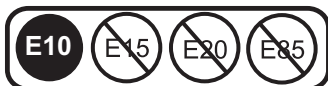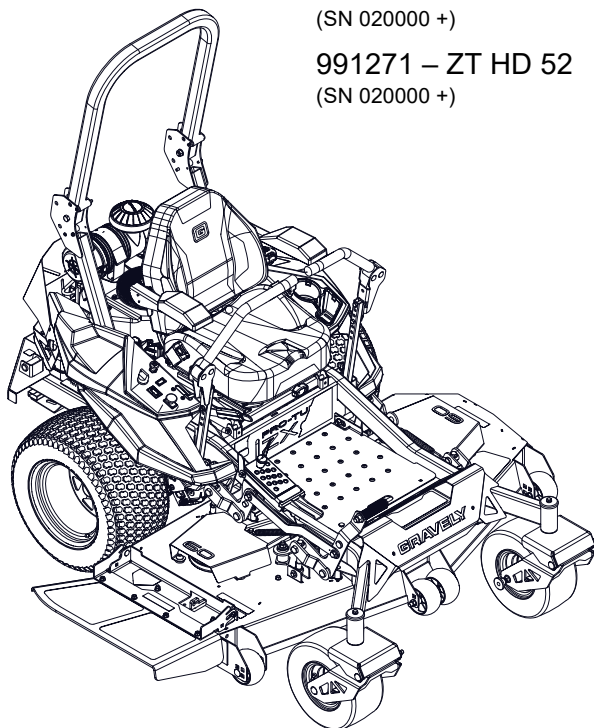

EN ENGLISH

FR FRANÇAIS

09362100A • 9/22

Printed in USA

TABLE OF CONTENTS

WELCOME	1	Operate Unit	19
Register Your Product!	1	Stop the Engine	20
SAFETY	2	Move Unit Manually	20
Practices & Laws	2	Transport Unit	20
Emission Control System	2	Release Transport Lock	20
Required Operator Training	2	MAINTENANCE	21
Safety Alert Symbol	2	Maintenance Schedule	21
Signal Words	2	Service Parts	21
Safety Decals	3	Service Position	22
Safety Instructions	7	Check Safety Interlock System	23
ASSEMBLY	10	Check Parking Brake	23
CONTROLS AND FEATURES	13	Check Engine Oil	23
Ignition Key	15	Check Tire Pressure	23
Choke Control Knob	15	Check Fasteners	23
Throttle Control Lever	15	Lubricate Unit	23
Power-Take-Off (PTO) Knob	15	Check Mower Blades	24
Hour Meter	15	Check Battery	24
Height-of-Cut Adjustment System	15	Check Mower Belts	24
Transport Lock Release Lever	16	Check Hydraulic System	24
Deck Lift Pedal	16	ADJUSTMENTS	26
Seat Adjustment Lever	16	Adjust Seat	26
Rollover Protection Structure (ROPS) ..	16	Adjust Steering Levers	26
Parking Brake Lever	16	Adjust Unit to Drive Straight	28
Safety Interlock System	16	ELECTRICAL SERVICE	28
Steering Levers	16	TROUBLESHOOTING	30
Transaxle Bypass Levers	16	STORAGE	32
Anti-scalp Wheel	16	Short-Term Storage	32
Headlight Switch	16	Long-Term Storage	32
OPERATION	17	Start-of-Season Preparation	32
Emergency Stopping	17	ACCESSORIES	32
Before Operating Unit	17	WARRANTY	38
Position ROPS	18		
Start the Engine	19		

WELCOME

Congratulations on your purchase and welcome to the Gravelly family! Every machine in the Gravelly lineup is designed for long-lasting and unsurpassed performance. We are confident your machine will be part of your family for many years to come.

Have Questions or Need Assistance?

www.gravelly.com


A service manual and parts manual for your unit are available for free download or purchase at www.gravelly.com.

Manual del operador español está disponible para su descarga gratuita o compra en www.gravelly.com.

REGISTER YOUR PRODUCT!

It is extremely important to register your product at time of purchase. Product registration activates the warranty and establishes a communication link from AriensCo.

Locate the model and serial number decal on your unit and register those numbers online at www.gravelly.com. See Figure 1 for decal location. Be aware that the original selling dealer may have already completed product registration on behalf of the original purchaser.

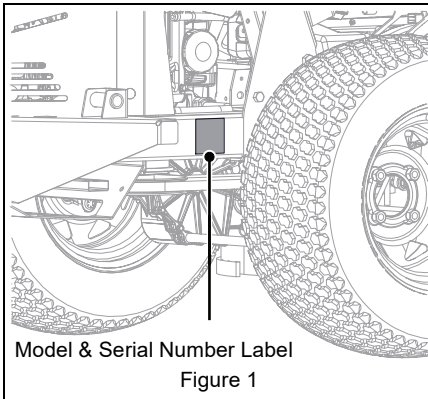

Record model number here.

Record serial number here.

MANUALS

Before operating or servicing the unit, carefully and completely read the manuals provided with the unit. They contain safety instructions and important information about unit controls.

The engine on this unit is covered by a separate manual. Refer to the engine manual for engine service recommendations. Contact the engine manufacturer for a replacement manual if necessary.

Your dealer must review important information in this manual with you before or upon delivery of the unit. It is your responsibility to read and understand all safety precautions and instructions in the manuals. If you do not understand or have difficulty following the instructions, contact your Gravelly dealer for assistance. To locate your nearest Gravelly dealer, go to www.gravelly.com.

DISCLAIMER

Gravelly reserves the right to discontinue, make changes to, and add improvements upon its products at any time without public notice or obligation. The descriptions and specifications contained in this manual were in effect at printing. Equipment described in this manual may be optional. Some illustrations may not be applicable to your unit.

SAFETY

Read these safety rules and follow them closely. Failure to follow these rules could lead to loss of control of unit, severe personal injury or death to you or bystanders, or result in damage to property or the machine.

PRACTICES & LAWS

Practice usual and customary safe working precautions. Learn applicable rules and laws in your area. Always follow the practices set forth in this manual.

EMISSION CONTROL SYSTEM

This equipment and/or its engine may include exhaust and evaporative emissions control system components required to meet U.S. Environmental Protection Agency (EPA) and/or California Air Resources Board (CARB) regulations. Tampering with emission controls and components by unauthorized personnel may result in severe fines or penalties. Emission controls and components can only be adjusted by an Gravely dealer or an authorized engine manufacturer's service center. Contact your Gravely Equipment Retailer concerning emission controls and component questions.

REQUIRED OPERATOR TRAINING



Read and understand the Operator's Manual and decals on the unit. This information is for your safety and the proper use of your equipment. Failure to follow these

instructions and warnings may cause death or serious injury. If you have purchased this product from an Gravely dealer, the dealer can provide you with training.

Familiarize yourself and any other operators with all controls and the safe use of the features of this unit. If you loan, rent or sell this product to others, provide them with all manuals.

If you have any questions, please call our customer support line at 920-756-4688 or contact us at www.gravely.com. Do not use this equipment if, after reading the Operator's Manual and the on-board decals, you have any questions about the safe use of this product.



WARNING: AVOID INJURY. This cutting machine is capable of amputating hands and feet and throwing objects. Failure to observe the safety instructions in the manuals and on decals could result in serious injury or death.

SAFETY ALERT SYMBOL



This is the safety alert symbol. It means:

- **ATTENTION!**
- **YOUR SAFETY IS INVOLVED!**

When you see this symbol:

- **BECOME ALERT!**
- **OBEY THE MESSAGE!**

SIGNAL WORDS

The safety alert symbol above and signal words below are used on decals and in this manual. Read and understand all safety messages.

1. Danger



DANGER: Indicates an **IMMINENTLY HAZARDOUS SITUATION!** If not avoided, **WILL RESULT** in death or serious injury.

2. Warning



WARNING: Indicates a **POTENTIALLY HAZARDOUS SITUATION!** If not avoided, **COULD RESULT** in death or serious injury.

3. Caution



CAUTION: Indicates a **POTENTIALLY HAZARDOUS SITUATION!** If not avoided, **MAY RESULT** in minor or moderate injury. It may also be used to alert against unsafe practices.

4. Notice

NOTICE: Indicates information or procedures that are considered important but not hazard related. If not avoided property damage could result.

5. Important

IMPORTANT: Indicates general reference information worthy of special attention.


SAFETY DECALS

The safety decals on your machine are visual reminders of the important safety information in this manual. All messages on your unit must be fully understood and carefully followed. Safety decals on the machine are explained below.

Safety Decal Locations

ALWAYS replace missing or damaged safety decals. Replacement decal part numbers are found in the parts manual for your machine and may be ordered from your dealer.

See Figure 2 for safety decal locations.

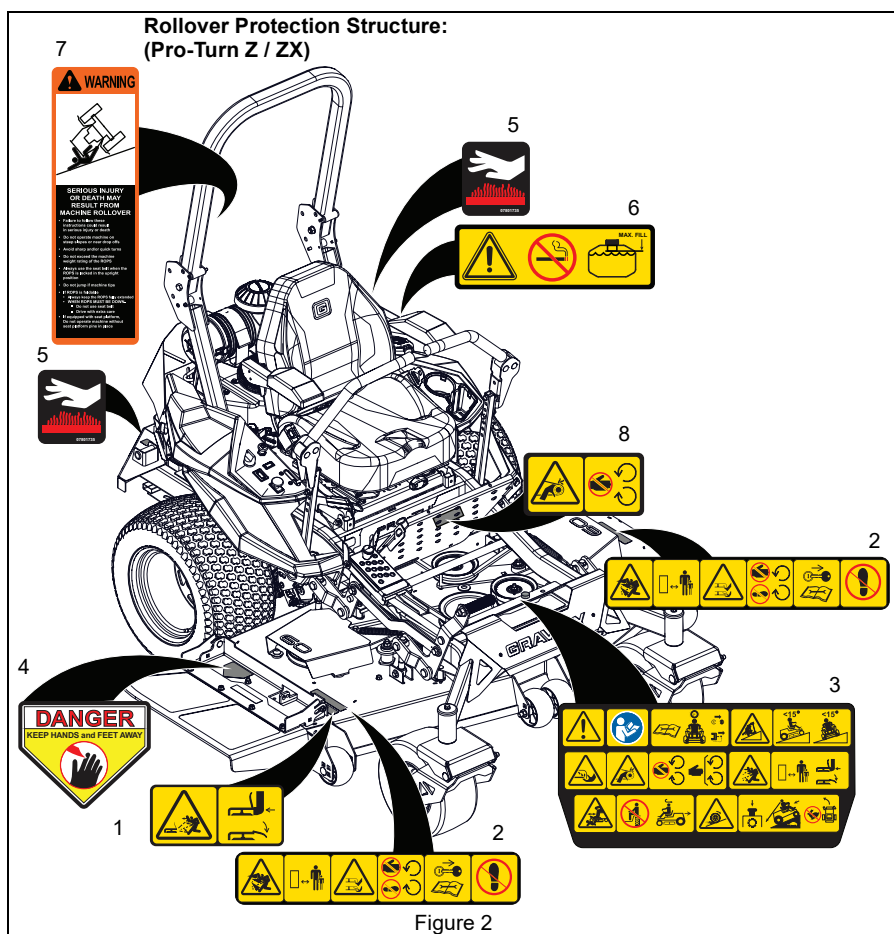

Safety Decal Descriptions

1. DANGER!



Discharge Hazard - NEVER operate unit without discharge chute in operating position. Thrown objects can cause injury or damage.



DO NOT operate mower unless all guards are in operating position or bagger is attached.

2. DANGER!



Discharge Hazard - NEVER direct discharge toward people, pets or property. Thrown objects can cause injury or damage.



Amputation Hazard - NEVER stick hands or feet under deck or shielded areas.



Shut off engine, remove key, and read manual before servicing or making adjustments to unit.



Keep children and others away from unit while unit is in operation.



Keep feet and hands away from all rotating or moving parts.



DO NOT step or stand in this area.

3. DANGER!



DANGER!



Read and understand the operator's manual before operating unit.

3. Amputation Hazard



To avoid amputation hazard DO NOT put hands near rotating blades.



To avoid amputation hazard DO NOT put hands near moving belts.



Keep hands away from all rotating or moving parts.



Keep all guards and shields in place.

3. Discharge Hazard



Discharge Hazard - NEVER direct discharge toward people, pets or property. Thrown objects can cause injury or damage.



DO NOT operate mower unless all guards are in operating position or bagger is attached.



Keep children and others away from unit while unit is in operation.

3. Tipping Hazard



Avoid tipping hazard.



DO NOT operate on slopes over 15°.



DO NOT operate on slopes over 15°.

3. Service Hazard




Before servicing unit do the following:



Read owners manual before servicing or making adjustments to unit.



Set parking brake.

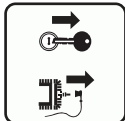

Remove key and disconnect spark plug before servicing or making adjustments to unit.

3. Bystander Hazard



DO NOT operate the unit in the presence of bystanders.



DO NOT carry passengers.




Look behind when operating the unit in reverse.

3. Loss of Traction Hazard



If loss of traction is experienced do the following:

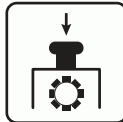

Disengage PTO.



Proceed off slope slowly.



DO NOT try to turn or speed up.

4. DANGER!



ALWAYS keep hands and feet away from discharge chute.

5. HOT PARTS!



DO NOT touch parts which are hot from operation. ALWAYS allow parts to cool.


6. DANGER!



DANGER!



No smoking.

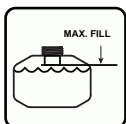

IMPORTANT: DO NOT overfill. Fill fuel tank to below bottom of filler neck.

WARNING: Overfilling may cause severe damage to evaporative system!

- NEVER fill fuel tank when engine is running, hot or unit is indoors. NEVER overfill fuel tank.
- Replace fuel cap securely and clean up spilled fuel.

7. WARNING! (PRO-TURN Z / ZX)



SERIOUS INJURY OR DEATH may result from machine rollover.

- Failure to follow these instructions could result in serious injury or death.
- DO NOT operate machine on steep slopes or near drop offs.
- Avoid sharp and/or quick turns.
- DO NOT exceed the machine weight rating of the ROPS.
- ALWAYS use the seat belt when the ROPS is locked in the upright position.
- DO NOT jump if machine tips.
- If ROPS is foldable:
 - ALWAYS keep the ROPS fully extended.
 - WHEN ROPS MUST BE DOWN:
 - DO NOT use seat belt.
 - Drive with extra care.
- If equipped with seat platform:
 - DO NOT operate machine without seat platform pins in place or locks engaged.

ROLLOVER PROTECTIVE STRUCTURE

To maintain operator protection and roll bar certification:

- Replace a damaged roll bar, DO NOT attempt to repair or modify.
- Any alteration of the roll bar must be approved by the manufacturer.
- DO NOT exceed the machine weight rating of the roll bar.

8. DANGER!



To avoid amputation hazard DO NOT put hands near moving belts.



Keep hands away from all rotating or moving parts.

SAFETY INSTRUCTIONS

The following safety instructions are based on B71.1, B71.4 specifications of the American National Standards Institute and ISO 5395 in effect at the time of production.

Safe Practices for Ride-On Mowers

If used improperly, this machine is capable of amputating hands and feet and throwing objects. Failure to observe the following safety instructions could result in serious injury or death. Use only for purposes intended as set forth in the Operator's Manual. Other use is improper and may cause serious injury or death.

General Information

Read, understand, and follow instructions and warnings in this manual and on the machine, engine and attachments.

Only allow operators, who are responsible, trained, familiar with the instructions, and physically capable to operate the machine.

DO NOT carry passengers and keep people or pets away from the mowing area.

DO NOT operate the machine while physically or mentally impaired, feeling tired, ill or under the influence of alcohol or drugs.

Follow the manufacturer's recommendation for wheel weights or counterweights.

DO NOT touch parts which are hot. Allow parts to cool.

Preparation Before Operating

Inspect unit before each use for missing or damaged decals and shields, correctly operating safety interlock system, ROPS and deterioration of grass catchers. Replace or repair as needed.

Clear the operating area of all objects which could be thrown by or interfere with operation of the machine.

Keep the area of operation clear of all bystanders, particularly small children. Stop the machine and attachment(s) if anyone enters the area.

DO NOT operate the machine without the entire grass catcher, discharge chute, or other safety devices in place and functioning properly. Check frequently for signs of damage, wear or deterioration and replace as needed.

NEVER tamper with safety devices. Check their proper operation regularly. NEVER do anything to interfere with the intended function of a safety device or to reduce the protection provided by the safety device.

Check parking brake operation frequently. Adjust and service as required.

Wear appropriate personal protective equipment such as safety glasses, hearing protection, and substantial footwear. DO NOT mow barefoot or while wearing sandals.

Operating

Improper use of power equipment can cause serious permanent injury or death to the operator or a bystander. Understand:

- How to operate all controls
- The functions of all controls
- How to STOP in an emergency
- Braking and steering characteristics
- Turning radius and clearances

If the operator or the mechanic cannot read the manual, it is the owner's responsibility to explain it to them. Manuals are available in other languages at www.gravely.com.

Only run the engine in well ventilated areas. Exhaust gases contain carbon monoxide, an odorless deadly poison.

Only operate the machine in daylight or good artificial light.

Avoid holes, ruts, bumps, rocks and other hazards. Uneven terrain could overturn the machine, or cause operator to lose their balance, footing and/or control of the mower.

DO NOT put hands or feet near rotating parts or under the machine. Keep clear of the discharge opening at all times.

Avoid slippery surfaces. ALWAYS be sure of your footing.

Stop engine before removing grass catcher or unclogging chute.

DO NOT direct discharge material toward anyone. Avoid discharging material against a wall or obstruction. Material may ricochet back toward the operator. Stop the blade(s) when crossing gravel surfaces. DO NOT mow into roads or across sidewalks.

DO NOT leave a running machine unattended. ALWAYS park on level ground, disengage the attachment, set parking brake, stop engine and remove key (if applicable) before leaving the operator's position.
DO NOT mow in reverse unless absolutely necessary. ALWAYS look down and behind before and while backing.
Lightning can cause severe injury or death. If lightning is seen or thunder is heard in the area, DO NOT operate the machine; seek shelter.
If you strike a foreign object, stop and inspect the machine. Repair, if necessary, before restarting.
ALWAYS check overhead and side clearances carefully before operation. Keep in mind that your mower deck may be wider than your track width.

Children Specific

Tragic accidents can occur if the operator is not alert to the presence of children. Children are often attracted to the machine and the mowing activity. NEVER assume that children will remain where you last saw them.
Keep children out of the operating area and under the watchful care of a responsible adult other than the operator.
Do not carry children, even with the blade(s) shut off. Children could fall off and be seriously injured or interfere with safe machine operation. Children who have been given rides in the past could suddenly appear in the mowing area for another ride and be run over or backed over.
DO NOT allow children under the age of 18 to operate any outdoor power equipment.

Slope Specific

Slopes are a major factor related to accidents. Operation on slopes requires extra caution. If you feel uneasy on a slope DO NOT mow it. Use the parking brake for emergency stops.
DO Not operate on slopes of more than 15°.
Do not mow within 1.2 M (4 feet) of a drop off. Do not mow within 1.2 M (4 feet) of a pond or other waterway.
The primary hazard of slope operation is loss of control and/or roll over.

Mow up and down slopes, NEVER across. Exercise caution when changing direction on slopes. Use caution while operating near dropoffs.
Avoid mowing wet grass. Wet surfaces can cause a loss of traction and control.
DO NOT operate machine under any condition where traction, steering, or stability is in question. Tires could slide even if the wheels are stopped.
Always keep the machine in gear when going down slopes. Do not coast downhill.
Avoid starting and stopping on slopes. Avoid making sudden changes in speed or direction. Make turns slowly and gradually.
Use extra care while operating machine with a grass catcher or other attachment(s). They can affect the stability of the machine.

Fire and Fuel Specific

Extinguish all cigarettes, cigars, pipes and other sources of ignition.
Use only an approved fuel container.
DO NOT remove fuel cap or add fuel with the engine running or while hot.
DO NOT refuel indoors or in enclosed spaces.
DO NOT store the machine or fuel container, or refuel, where there is an open flame, spark, or pilot light such as on a water heater or other appliance.
If fuel is spilled, DO NOT attempt to start the engine and avoid creating any source of ignition until fuel vapors have dissipated.
To help prevent fires: keep machine free of grass, leaves, or other debris build up; clean up oil or fuel spillage and remove any fuel soaked debris; allow engine to cool before storing.
Use extra care in handling gasoline and other fuels. They are flammable and vapors are explosive.

Hauling

Use a single full-width ramp for loading and unloading a machine for transport. Secure with appropriate straps.

Towing

Follow the manufacturer's recommendation for weight limits for towed equipment and towing on slopes.
--

ROPS (Pro-Turn Z / ZX)

The ROPS is an integral safety device. Do not remove or alter the ROPS.

Keep a folding ROPS in the raised and locked position and use the seat belt when operating the machine.

Lower a folding ROPS temporarily only when absolutely necessary. Do not wear the seat belt when folded down. There is no rollover protection when a folding ROPS is in the down position.

Frequently inspect the ROPS and the seatbelt for damage. Replace a damaged ROPS. Do not repair or alter.

Service

Keep machine in good working order. Replace worn or damaged parts.

Use caution when servicing blades. Wrap the blade(s) or wear gloves. Replace damaged blades. DO NOT repair or alter blade(s).

Disconnect spark plug wire(s) and the negative battery cable before making any repairs.

Use only attachments recommended by AriensCo that are appropriate to your use and can be used safely in your application.

The use of non-genuine replacement parts or accessories could adversely affect machine operation and safety.

DO NOT change engine governor setting or overspeed the engine.

ASSEMBLY



WARNING: AVOID INJURY.
Read and understand the entire *Safety* section before proceeding.

1. Remove pins and fold crate ends outward.
2. Remove plastic bag from around unit and discard.

Models 991266, 991268, 991270, 991271, 991272, 991274, 991276, 991278

3. Remove seat from footplate. See Figure 3.

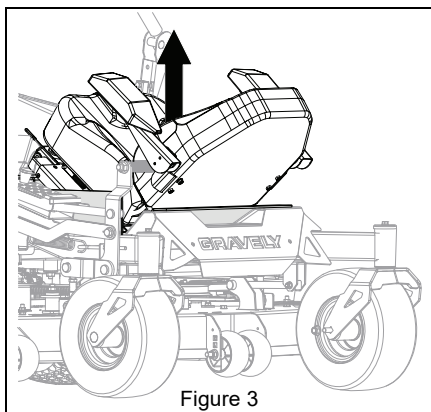


Figure 3

4. Remove mounting hardware securing shipping bracket and seat pad to unit. Discard all parts. See Figure 4.

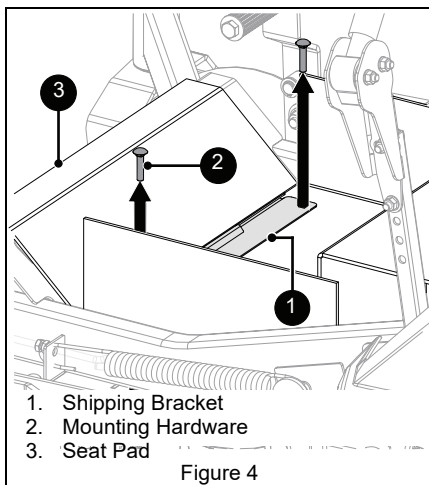


Figure 4

See Figure 5.

5. Remove and retain clevis pins and washers from pivot brackets.
6. Align seat plate with holes in pivot brackets.
7. Insert insert pins fully through seat brackets, pivot brackets and flat washers. Ensure that self-locking pin extends fully from clevis pin.

IMPORTANT: Pins **MUST** be installed from the inside facing outward.

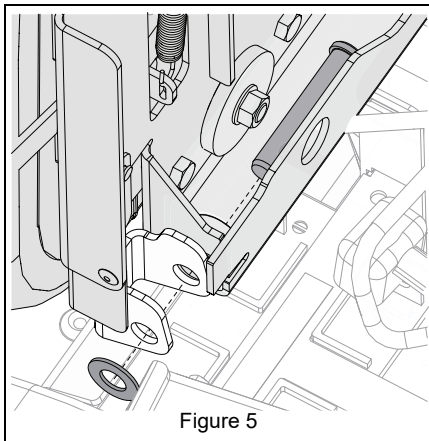


Figure 5

8. Connect operator presence cable. See Figure 6.

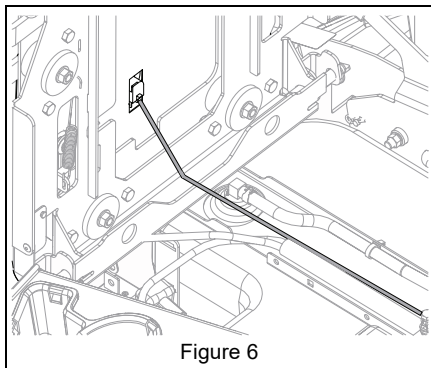


Figure 6

All Models

See Figure 7.

9. Remove plastic boot from negative battery terminal and discard.
10. Remove hardware from negative (black) battery cable. DO NOT discard hardware.
11. Secure negative battery cable to negative (open) battery terminal with hardware removed in previous step.

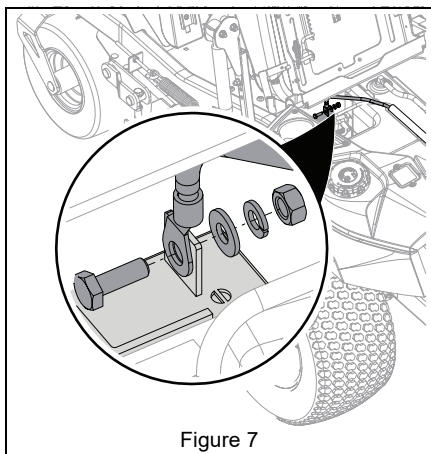


Figure 7

12. *Models 991280, 991282, 991284, 991286, 991288, 991290:* Rotate ROPS to operating position and secure with lock pins. See *Position ROPS* on page 18.
13. Pull transaxle bypass levers out to disengage transaxles. See Figure 8.

IMPORTANT: Be sure to pull bypass levers out on each side of unit.

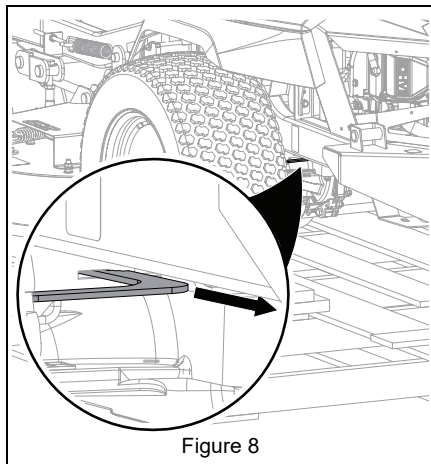


Figure 8

14. Release parking brake. See Figure 9.

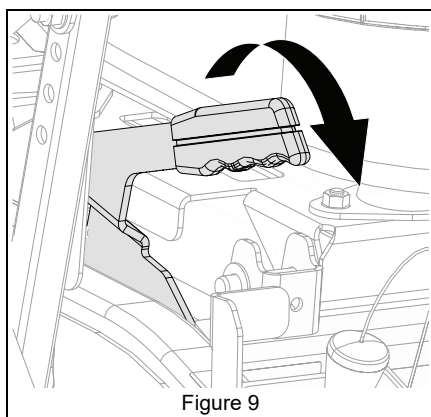


Figure 9

15. Push unit off crate.
16. Engage parking brake.
17. Lift discharge chute up slightly and rotate down into operating position. See Figure 10.

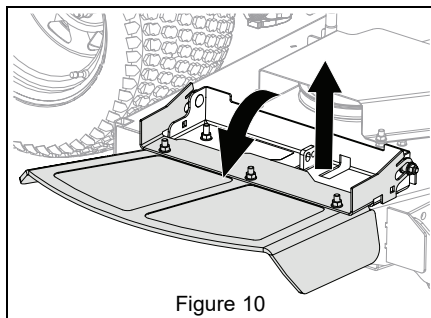


Figure 10

18. Remove hardware securing deck lift pedal to unit and remove pedal. Retain for reinstallation. See Figure 11.

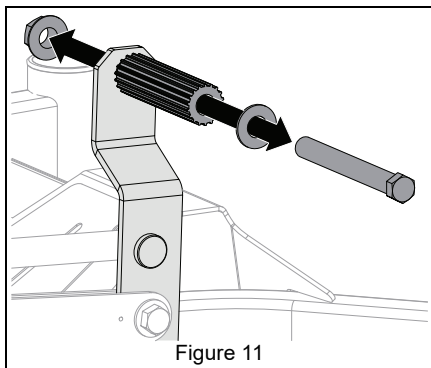


Figure 11

19. Rotate pedal as shown in Figure 12 and secure to unit with hardware removed in step 18. See Figure 12.



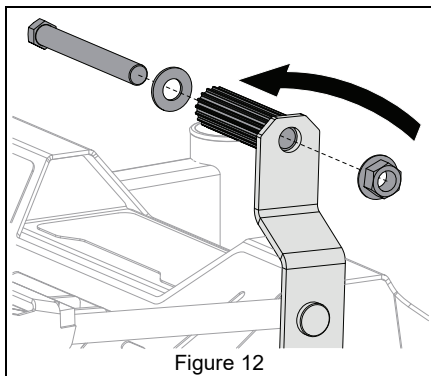


Figure 12



20. Push transaxle bypass levers in to engage transaxles.
21. Adjust steering levers. See *Adjust Steering Levers* on page 26.

CONTROLS AND FEATURES


**Models 991266, 991268,
991270, 991271, 991272**

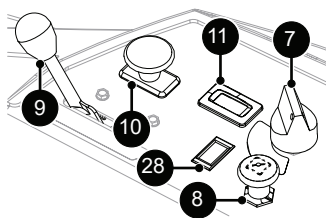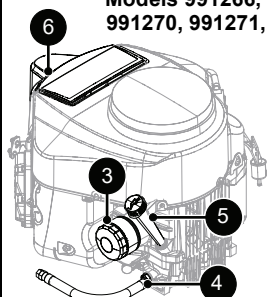

**Models 991274, 991276,
991278**

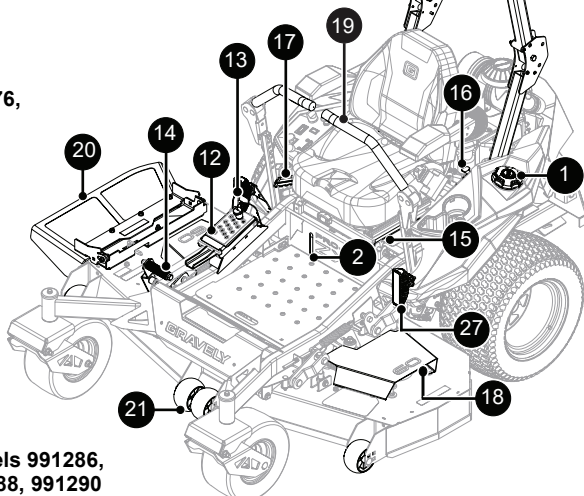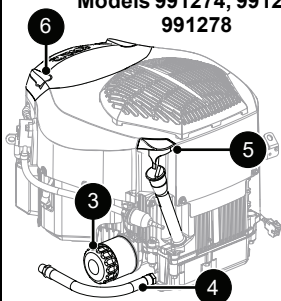

**Models 991286,
991288, 991290**

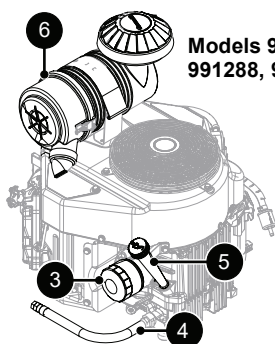

**Models 991280,
991282, 991284**



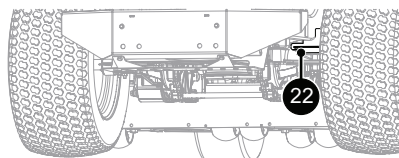


Figure 13

1. Fuel Tank and Cap
2. Fuel Level Window
3. Oil Filter
4. Oil Drain
5. Engine Oil Dipstick
6. Air Filter
7. Ignition Key
8. Choke Control Knob (Models 991266, 991268, 991270, 991271, 991272, 991280, 991282, 991284, 991286, 991288, 991290)
9. Throttle Control Lever
10. Power Take-off (PTO) Knob
11. Hour Meter
12. Height-of-Cut Adjustment System
13. Transport Lock Release Lever
14. Deck Lift Pedal
15. Seat Adjustment Lever
16. Seat Latch (Models 991280, 991282, 991284, 991286, 991288, 991290)
17. Parking Brake Lever
18. Belt Cover (2)
19. Steering Lever (2)
20. Discharge Chute
21. Anti-Scalp Wheel (6)
22. Transaxle Bypass Lever (2)
23. Battery (Under Seat)
24. Fuse Box
25. Hydraulic Oil Expansion Tank (2)
26. Rollover Protection Structure (ROPS) (Models 991280, 991282, 991284, 991286, 991288, 991290)
27. Headlight (Model 991271)
28. LED Light Switch (Model 991271)

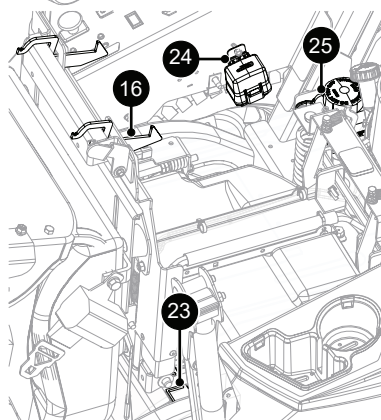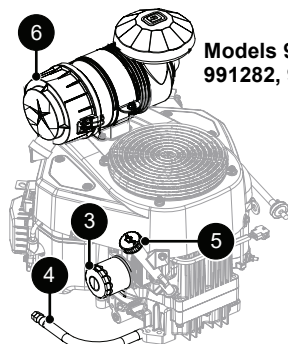

WARNING: AVOID INJURY.
Read and understand the entire *Safety* section before proceeding.

See Figure 13 for all controls and features locations.

IGNITION KEY

See Figure 14.

Controls power to the engine. The key cannot be removed when in run position.

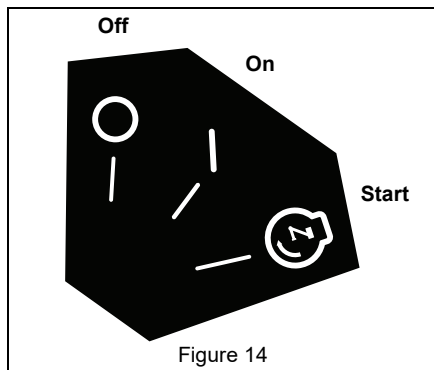


Figure 14

CHOKE CONTROL KNOB

Models 991266, 991268, 991270, 991271, 991272, 991280, 991282, 991284, 991286, 991288, 991290

See Figure 15.

Controls airflow to the engine.

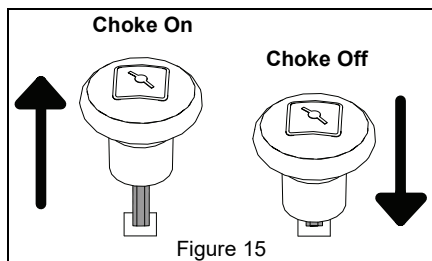


Figure 15

THROTTLE CONTROL LEVER

See Figure 16.

Controls engine speed.

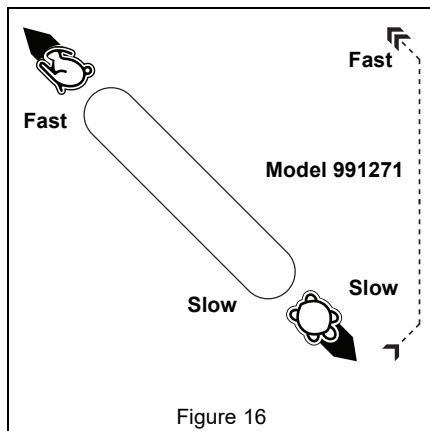


Figure 16

POWER-TAKE-OFF (PTO) KNOB

See Figure 17.

Controls power to mower blades. The engine will not start with the PTO knob in the on position.



WARNING: AVOID INJURY.
Blades will not *immediately* stop after pushing PTO knob down to off position.

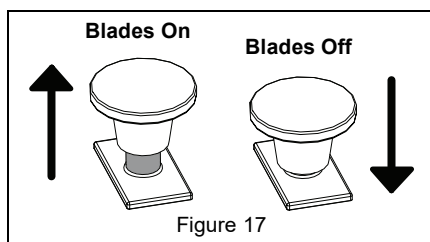


Figure 17

HOUR METER

Measures engine runtime and cannot be reset.

HEIGHT-OF-CUT ADJUSTMENT SYSTEM

Sets the height of cut.

TRANSPORT LOCK RELEASE LEVER

See Figure 18.

Releases deck from transport lock position.

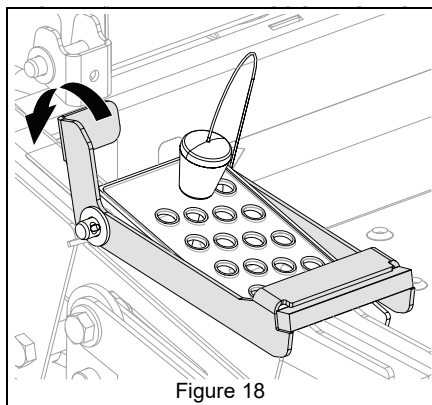


Figure 18

DECK LIFT PEDAL

Raises mower deck to change height-of-cut setting.

SEAT ADJUSTMENT LEVER

Unlocks seat to allow operator to move seat forward or backward and then lock in desired position.

ROLLOVER PROTECTION STRUCTURE (ROPS)

Models 991280, 991282, 991284, 991286, 991288, 991290

Help protect operator that is wearing their seatbelt in the event of a rollover. **DO NOT** wear seatbelt when operating with ROPS in the lowered position.

PARKING BRAKE LEVER

See Figure 19.

Controls the parking brake. The engine will not start with brake in the off position.

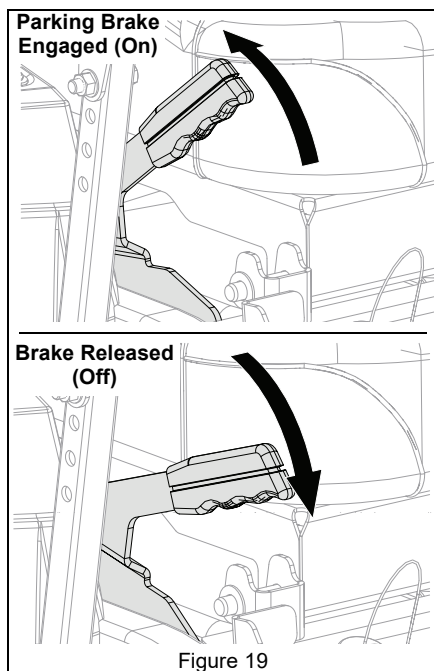


Figure 19

SAFETY INTERLOCK SYSTEM

Monitors the interaction of various unit features for operator safety.

STEERING LEVERS

Control the direction and speed of unit. To stop unit, return both steering levers to neutral.

TRANSAXLE BYPASS LEVERS

Control the transaxles so unit may be moved with the engine off.

ANTI-SCALP WHEEL

Help prevent the deck from contacting the ground and scalping the lawn when passing over a high spot.

HEADLIGHT SWITCH

Model 991271

Turns headlight on and off.

OPERATION



WARNING: AVOID INJURY.
Read and understand the *Safety* section before proceeding.

IMPORTANT: All references to left, right, front or rear are given from the perspective of operator in operator's position, facing the direction of forward travel.

EMERGENCY STOPPING

1. Move steering levers to neutral position.
2. Engage parking brake.
3. Push PTO knob down to off position.
4. Turn ignition key to off position and remove key from ignition.

BEFORE OPERATING UNIT

1. Check fuel level and add fuel if needed.

IMPORTANT: Use fresh unleaded fuel with an octane rating of at least 87. DO NOT use E85 blended fuels; the engine is not E20 / E30 / E85 compatible. The maximum recommended ethanol content is 10%. Gravely recommends using a quality fuel stabilizer in all fuel. See *Short-Term Storage* on page 32.

2. Check engine oil level and add oil if needed. Refer to engine manual.
3. Check condition of air cleaner. Refer to engine manual.
4. Check function of the Safety Interlock System by performing the tests in *Check Safety Interlock System* on page 23. Contact your Gravely dealer for repair if any of the tests fail.

5. Set cutting height. See Figure 20.
 - a. Push mower lift pedal forward until transport lock engages.
 - b. Insert adjustment pin through desired setting in height-of-cut adjustment system.
 - c. Push mower lift pedal slightly forward, release transport lock and slowly release pedal until it contacts adjustment pin and stops.

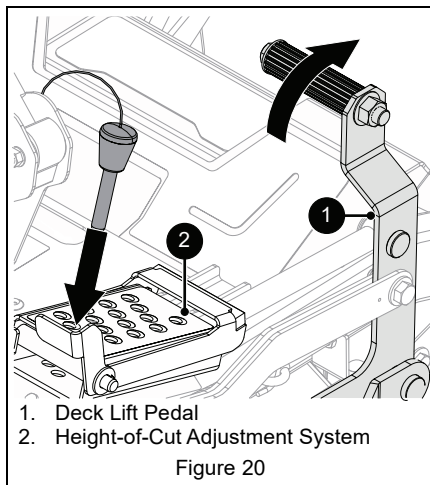


Figure 20

POSITION ROPS

Models 991280, 991282, 991284, 991286, 991288, 991290

IMPORTANT: Models 991266, 991268, 991270, 991271, 991272, 991274, 991276, 991278: An optional rollover protection structure (ROPS) is available for this unit. See *Accessories* on page 32.

IMPORTANT: Inspect ROPS and seatbelt for damage and loose or missing hardware.

Raise Center Bar

See Figure 21.

1. Remove hairpins from lock pins and remove lock pins from hinge plate.
2. Raise center bar and secure with lock pins and hairpins.



WARNING: AVOID INJURY. Seatbelt **MUST** be worn when operating with center bar raised.

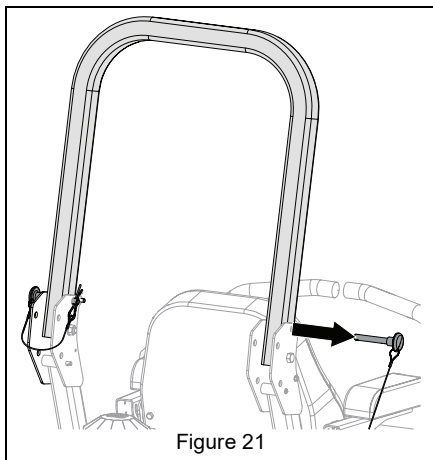


Figure 21

Lower Center Bar

See Figure 22.



WARNING: AVOID INJURY. Lower the center bar only when needed to drive under an object. There is no rollover protection with the center bar in the lowered position. **DO NOT** wear seatbelt when ROPS is in lowered position.

1. Remove hairpins from lock pins and remove lock pins from hinge plate.
2. Lower center bar and secure with lock pins and hairpins.

IMPORTANT: Return center bar to the raised position when clear of obstacles.

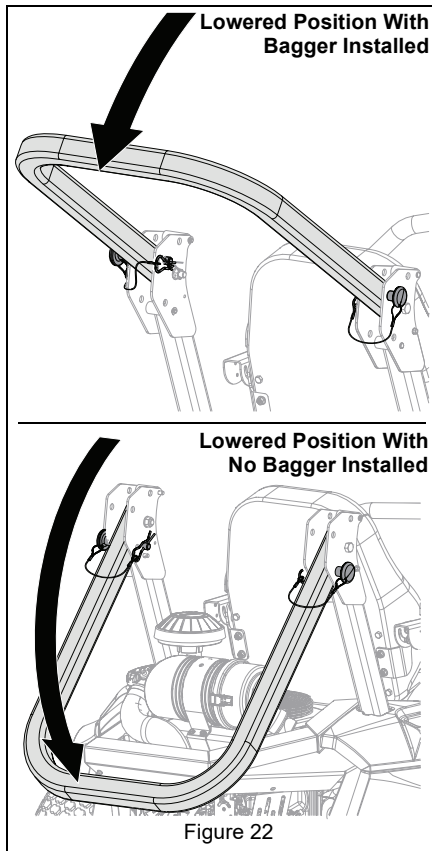


Figure 22

START THE ENGINE

1. Push PTO knob down to off position.
2. Move steering levers to neutral position.
3. Engage parking brake.
4. *Models 991266, 991268, 991270, 991271, 991272, 991280, 991282, 991284, 991286, 991288, 991290:* If engine is cold, pull choke knob up to on position. If engine is warm or hot, turn choke off.
5. Set throttle to slow speed.
6. Insert ignition key and turn to start position. Release key when engine starts.

IMPORTANT: Do not operate the starter for more than 10 seconds at a time. If the engine does not start, allow a 60-second cool down period between starting attempts.

7. *Models 991266, 991268, 991270, 991271, 991272, 991280, 991282, 991284, 991286, 991288, 991290:* If choke is on, wait a few seconds after engine starts and then push choke knob down to off position.

IMPORTANT: Make sure choke is completely off. Engine will not run smoothly using partial choke.

OPERATE UNIT

1. Release parking brake.
2. Set throttle control lever to fast position.

IMPORTANT: Engaging the PTO knob with the throttle lever set lower than fast position can cause excessive belt wear. ALWAYS use fast position when engaging the PTO.


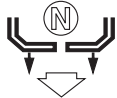
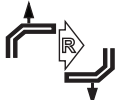
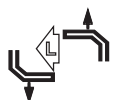

3. Pull PTO knob up to on position.

IMPORTANT: Never engage the PTO if the mower is plugged with grass or other material. This may cause damage to the electric clutch.



WARNING: AVOID INJURY.
Move the steering levers slowly and keep the throttle at slow speed until you learn how to operate the unit.

4. Move steering levers to begin mowing.

Direction of Travel	Lever Position
Forward	Push both levers forward from neutral position. 
Reverse	Pull both levers backward from neutral position. 
Right Turn	Push left lever farther forward than the right lever. 
Left Turn	Push right lever farther forward than the left lever. 
Stop	Return both levers to neutral position. 

IMPORTANT: Aggressive turning can scuff or damage lawns. Always keep both wheels rotating when making sharp turns. DO NOT make turns with inside wheel completely stopped. For minimum turning radius, slowly reverse inside wheel while moving outside wheel slowly forward.

For Best Mowing Results

- Cut grass when it is dry.
- Keep mower blades sharp.
- Keep mower deck properly leveled.
- Do not set height of cut too low. For very tall grass, mow twice.
- Do not travel too fast.
- Mow with the engine set at full throttle.
- When mulching, only remove 1/3 of grass length per cutting. Do not cut more than 2.5 cm (1") at any one time.
- Discharge clippings into areas already cut.
- Vary cutting pattern with each mowing.
- Do not allow grass or debris to collect inside of mower deck. Clean after each use.

STOP THE ENGINE



WARNING: AVOID INJURY.
Wait for all moving parts to stop before leaving operator's position.

1. Move steering levers to neutral position and rotate outward.
2. Engage parking brake.
3. Push PTO knob down to off position.
4. Set throttle to slow speed.
5. Turn ignition key to off position and remove key from ignition.

MOVE UNIT MANUALLY

Bypass the transaxles to move the unit with the engine off.

IMPORTANT: There is one transaxle bypass lever on each side of unit. Ensure that both levers are fully in front or rear position.

1. Stop engine, remove key and wait for moving parts to stop and for hot parts to cool.
2. Pull both transaxle bypass levers out into bypass position. See Figure 23.

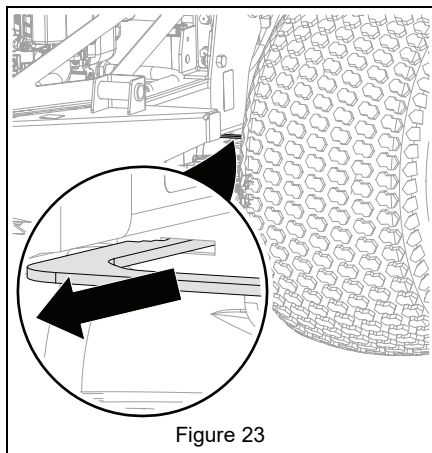


Figure 23

3. Release parking brake and push unit to desired location.
4. Engage parking brake.
5. Return transaxle bypass levers to operating position. See Figure 24.

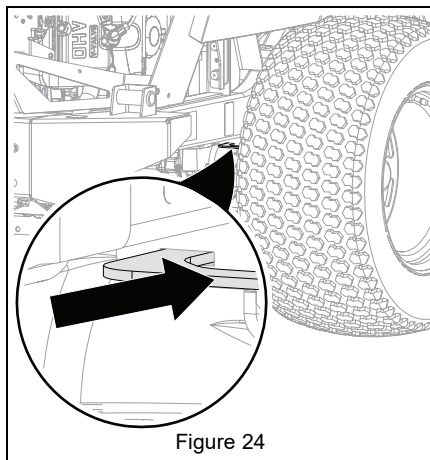


Figure 24

TRANSPORT UNIT

1. Push deck lift pedal completely forward to engage transport lock. Release pedal.
2. Move unit to transport vehicle.
3. Stop engine, engage parking brake and remove key from ignition.
4. Secure mower frame to transport vehicle.

NOTICE: NEVER secure unit to vehicle from rods or linkages that could be damaged.

RELEASE TRANSPORT LOCK

1. Push deck lift pedal forward and lift transport lock release lever.
2. Slowly return mower lift pedal to resting position.

MAINTENANCE



WARNING: AVOID INJURY.
Read and understand the
Safety section before
proceeding.

Your Gravely dealer can provide service and adjustments to keep your unit operating at peak efficiency.

Contact an authorized engine manufacturer's service center for engine service.

MAINTENANCE SCHEDULE

Service Performed	Each Use	Every 25 hrs.	Every 50 hrs.	Every 100 hrs.	Every 400 hrs.
Clean Engine of Any Grass or Debris	•				
Clean Mower Deck of Any Grass or Debris	•				
Check Safety Interlock System	•				
Check Hydraulic System	•				
Check Parking Brake	•				
Check Engine Oil *	•				
Change Engine Oil *					
Check Tire Pressure	•				
Check Mower Blades	•				
Check Battery		•			
Clean Battery		•			
Check Air Filter *			•		
Check Fasteners			•		
Lubricate Unit			•		
Clean Engine Cooling System*				•	
Check Belts				•	
Change Hydraulic Oil and Filter **					•
* Refer to engine manual for instructions					
** Change after first 75 hours of operation					

SERVICE PARTS

See your Gravely dealer to purchase service parts for your unit.

Description	Qty.	Part No.
Transaxle Drive Belt	1	07225600
Mower Belt – Left 44"	1	07200814
Mower Belt – Right 44" & 48"	1	07200805
Mower Belt – Left 48"	1	07200815
Mower Belt – Left 52"	1	07200816
Mower Belt – Right 52"	1	07200806
Mower Belt – Left 60"	1	07200817
Mower Belt – Right 60"	1	07200807
Mower Blade – 44" & 48"	3	00450200
Mower Blade – 52"	3	03253800
Mower Blade – 60"	3	03253900
Seat Switch	1	03654200
Hydraulic Oil – 32 oz (1 Qt.)	AR	00057100
Hydraulic Oil Filter	2	21545100
Fuel Filter (Models 991274, 991276, 991278)	1	21539500
Fuel Filter (Models 991266, 991268, 991270, 991271, 991272, 991286, 991288, 991290)	1	21548101
Fuel Filter (Models 991280, 991282, 991284)	1	21110575
Engine Oil Filter (Models 991266, 991268, 991270, 991271, 991272, 991286, 991288, 991290)	1	21549800
Engine Oil Filter (Models 991274, 991276, 991278)	1	20715100
Engine Oil Filter (Models 991280, 991282, 991284)	1	21110604
Air Filter (Models 991266, 991268, 991270, 991271, 991272)	1	21548000
Air Filter – Inner Element (Models 991286, 991288, 991290)	1	21548700
Air Filter – Outer Element (Models 991286, 991288, 991290)	1	21548800
Pre-Cleaner (Models 991274, 991276, 991278)	1	21555400
Air Filter (Models 991274, 991276, 991278)	1	21555300
Pre-Cleaner (Models 991280, 991282, 991284)	1	21573100

Description	Qty.	Part No.
Air Filter (Models 991280, 991282, 991284)	1	21573200
Muffler Gasket (Models 991266, 991268, 991270, 991271, 991272, 991286, 991288, 991290)	1	00191627
Muffler Gasket (Models 991274, 991276, 991278)	1	05600505
Muffler Gasket (Models 991280, 991282, 991284)	1	05600520
Relay	1	04438400
Fuel Stabilizer – 118 ml (4 oz.)	AR	04730400

SERVICE POSITION

Before starting any of the following maintenance procedures:

1. Park unit on a flat, level surface.
2. Stop engine, remove key and wait for all moving parts to stop and for hot parts to cool.
3. Engage parking brake.
4. Chock wheels. Strap and clamp unit onto lift, if used.
5. Place steering levers in neutral position and rotate outward.
6. *Models 991266, 991268, 991270, 991271, 991272, 991274, 991276, 991278:* Rotate seat forward. See Figure 25.
7. *Models 991280, 991282, 991284, 991286, 991288, 991290:* Pull seat latch and rotate seat forward. See Figure 26.

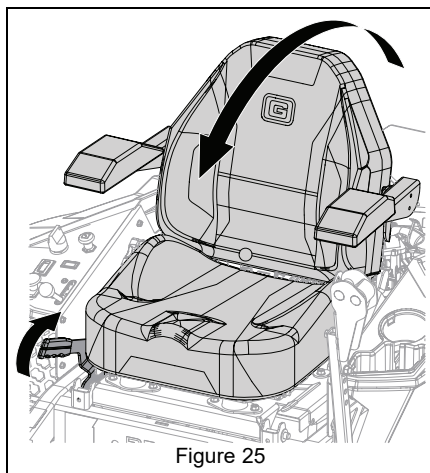


Figure 25

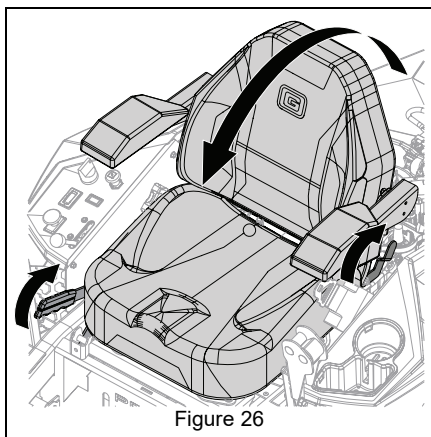


Figure 26

IMPORTANT: Reconnect spark plug wires after maintenance.

CHECK SAFETY INTERLOCK SYSTEM

Check function of the Safety Interlock System by performing the tests below. Contact your Gravely dealer for repair if any of the tests fail.

Test	Steering Levers	PTO	Parking Brake	Result
Starting Interlock				
1	Neutral	Off	On	Engine starts.
2	Forward, Neutral, Reverse	On	On or Off	Engine does not start.
3	Forward, Neutral, Reverse	On or Off	Off	Engine does not start.
Operating Interlock (Engine On)				
4 *	Forward, Neutral, Reverse	On	On or Off	Engine shuts off.
5 *	Forward, Neutral, Reverse	On or Off	Off	Engine shuts off.

* When operator lifts off seat.

CHECK PARKING BRAKE

1. Place unit in service position. See *Service Position* on page 22.
2. Bypass transaxles. See *Move Unit Manually* on page 20.
3. Push unit forward.
 - If unit does not move forward, no further action is needed.
 - If unit easily moves forward, adjust the brake lever. Refer to your unit's Service Manual.

CHECK ENGINE OIL

NOTICE: Engine oil level must be maintained at correct level or engine damage may occur. Refer to engine manual.

CHECK TIRE PRESSURE

See *Specifications* on page 34 for recommended tire pressure.



WARNING: AVOID INJURY.

Explosive separation of tire and rim parts is possible.

- DO NOT inflate tires above the recommended pressure.
- DO NOT inflate tires with a compressor; use a hand pump.
- DO NOT stand in front of tire assembly when inflating. Use a clip-on chuck and extension hose long enough to allow you to stand to one side.

CHECK FASTENERS

Check for loose or missing hardware.

LUBRICATE UNIT

1. Apply oil to all pivot points and pin connections.

Lubricate Seat

1. Place unit in service position.
2. Apply grease to seat tracks through slots under seat plate.

See Figure 27.

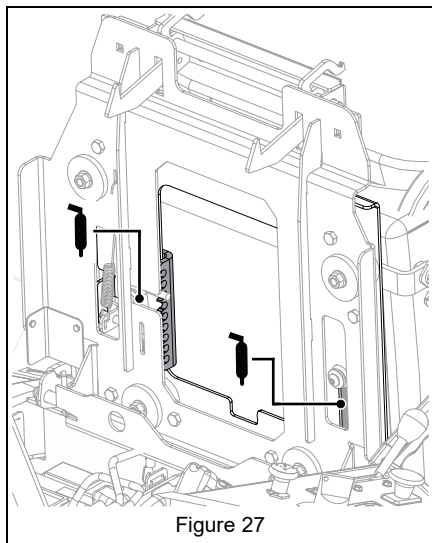


Figure 27

3. Return seat to operating position and slide seat back and forth to spread grease along tracks.

CHECK MOWER BLADES

Check blades for wear and damage. Replace or sharpen as needed.



CAUTION: AVOID INJURY. Use sturdy gloves or padding to protect hands when working with mower blades. Rotation of one blade rotates the other blades.



CAUTION: Unbalanced blades cause excessive vibration and eventual damage to unit. Balance blades before reinstalling on unit. NEVER weld or straighten blades.

CHECK BATTERY



WARNING: Battery posts, terminals and related accessories contain lead. Wash hands after handling.

Clean Battery



CAUTION: AVOID DAMAGE. DO NOT allow tools to contact metal surfaces when removing positive battery cable.

1. Disconnect battery cables, negative cable first.
2. Clean terminals and battery cable ends with a wire brush.
3. Coat terminals with dielectric grease or petroleum jelly.
4. Reinstall battery cables, positive first.

CHECK MOWER BELTS

Check belts for wear and replace as needed.




CAUTION: Keep body parts away from idler when releasing idler spring tension.

CHECK HYDRAULIC SYSTEM

Check Hydraulic Oil Level

1. Place unit in service position. See *Service Position* on page 22.
2. Check oil level in expansion tanks. Oil should reach the cold fill indicator mark. See Figure 28.

IMPORTANT: Engine should be cold when checking initial oil level.

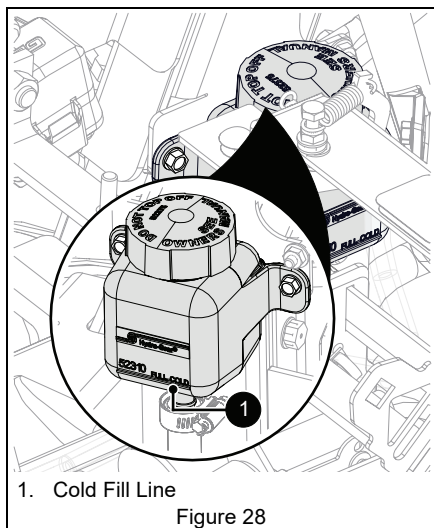


3. Operate engine for 1 minute and recheck oil levels.
4. Add hydraulic oil, if needed.
 - a. Remove expansion tank caps.
 - b. Fill expansion tanks with 15W-50 Full-Synthetic Hydraulic Fluid (Gravely p/n 00057100) until oil reaches the cold fill indicator mark. See Figure 28.
 - c. Reinstall expansion tank caps.

Change Hydraulic Oil and Filter

1. Operate unit for a few minutes to warm hydraulic oil.
2. Stop engine, remove key and wait for all moving parts to stop and for hot parts to cool.
3. Position container under oil filter to catch used oil.

See Figure 29.

4. Remove filter guard and oil filter from transaxle.
5. Remove the vent / fill plug from the fill port and allow transaxle to drain completely.

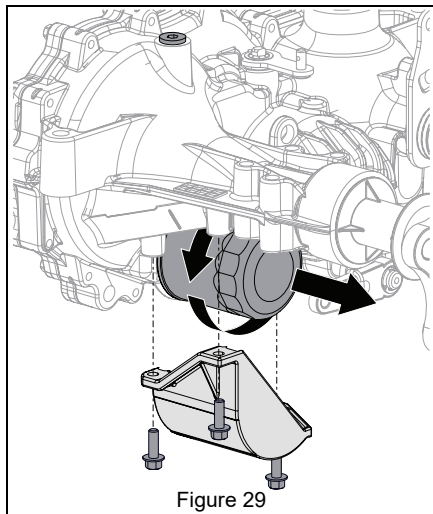

6. Wipe filter-mounting surface clean.
7. Lubricate rubber gasket on new oil filter with clean hydraulic oil.
8. Spin filter onto filter housing until it makes contact, and then turn filter 3/4 turn to tighten.
9. Reinstall filter guard and torque to 7.3 N•m (65 lb-in). DO NOT overtighten.
10. Add 15W-50 Full-Synthetic Hydraulic Fluid (Gravely p/n 00057100) until oil appears at the bottom of the fill port (1892.7 mL (64 fl. ounces) per transaxle).
11. Reinstall the vent / fill plug and torque to 20.3 N•m (180 lb-in).
12. Add hydraulic oil to expansion tank until oil reaches cold fill indicator mark.
13. Repeat steps 3 – 12 for other transaxle.
14. Purge hydraulic system. See *Purge Hydraulic System* on page 26.

Purge Hydraulic System

Purge air from hydraulic system after draining oil or changing the filter.



WARNING: AVOID INJURY.

This adjustment requires operating the engine. Use extreme care to avoid contact with moving parts and hot surfaces. Be sure rear of unit is well supported and secure before starting engine.

1. Park unit facing a wall or chock wheels.
2. Release parking brake.
3. Support unit so drive wheels are off the ground.
4. Bypass transaxles. See *Move Unit Manually* on page 20.
5. Start the engine and slowly move steering levers forward and backward 5 or 6 times.
6. Return transaxle bypass levers to operating position. See *Move Unit Manually* on page 20.
7. Slowly move steering levers forward and backward 5 or 6 times.
8. Stop engine, lower unit to ground and check oil level. Add oil if needed.
9. Repeat steps 1 – 8 until transaxles operate smoothly in forward and reverse at normal speed without excessive noise.

ADJUSTMENTS



WARNING: AVOID INJURY.

Read and understand the *Safety* section before proceeding.

ADJUST SEAT

See Figure 30.

1. Pull seat adjustment lever up to unlock seat.
2. Move seat to desired position.
3. Release seat adjustment lever to lock seat in place.

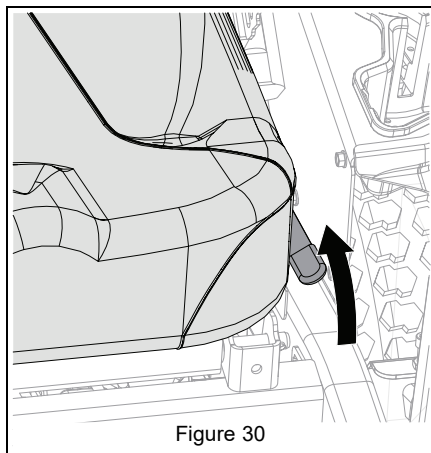


Figure 30

ADJUST STEERING LEVERS

Adjust Height

The steering lever height may be adjusted for operator comfort. See Figure 31.

1. Stop engine, remove key and wait for moving parts to stop and for hot parts to cool.
2. Remove steering lever hardware and remove steering lever from lower control arm.
3. Position steering lever at desired height and align with lower control arm. Secure with original hardware.

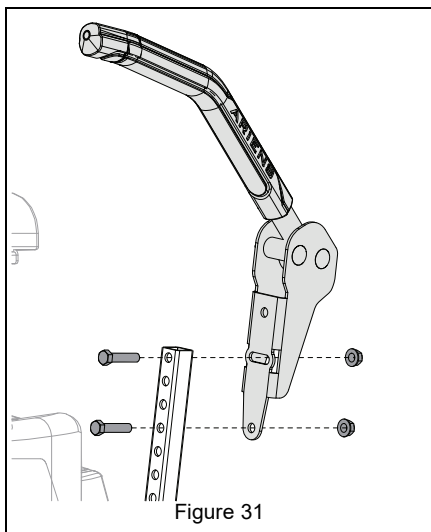


Figure 31

4. Adjust steering lever position. See *Adjust Steering Levers* on page 26.
5. Turn eccentric spacer so levers are at the same height and have a 1.3 cm – 2.5 cm (1/2" – 1") gap between lever ends. See Figure 32.

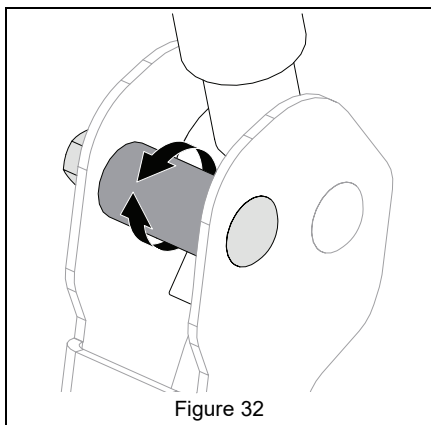


Figure 32

If there is more than 3.2 mm (1/8") between the horizontal alignment of the steering levers, align the levers.

6. Stop engine, remove key and wait for moving parts to stop and for hot parts to cool.
7. Engage parking brake.

8. Loosen mounting hardware, align levers and tighten hardware. See Figure 33.

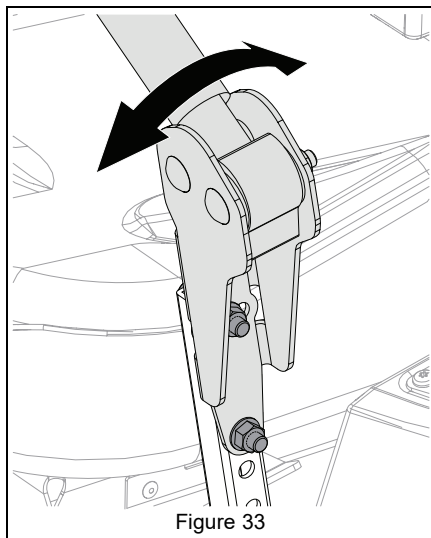


Figure 33

Adjust Forward Position

The steering lever forward position may be adjusted for operator comfort.

1. Stop engine, remove key and wait for moving parts to stop and for hot parts to cool.
2. Loosen mounting hardware on steering lever assemblies.
3. Place steering levers in desired position:
 - Gently push levers forward for greater distance from operator.
 - Gently pull levers back for closer distance to operator.
4. Tighten hardware.

ADJUST UNIT TO DRIVE STRAIGHT

Adjust Tire Pressure

1. Place unit in service position. See *Service Position* on page 22.
2. Check tire pressures. If needed, adjust to recommended pressures. See *Specifications* on page 36.
3. Check tracking.
 - If unit does not track straight, increase tire pressure to the drive wheel of the side it moves toward.

IMPORTANT: DO NOT exceed maximum tire pressure listed on tire sidewall.

- If increasing tire pressure does not correct tracking, adjust the limiter bolts as directed below.

Adjust Limiter Bolts

See Figure 34.

Limiter bolts can be adjusted to increase or decrease drive wheel speeds. To adjust:

1. Loosen jam nut.
 - Turn limiter bolt counterclockwise to increase maximum drive wheel speed on that side.
 - Turn limiter bolt clockwise to reduce maximum drive wheel speed on that side.
2. Tighten jam nut.

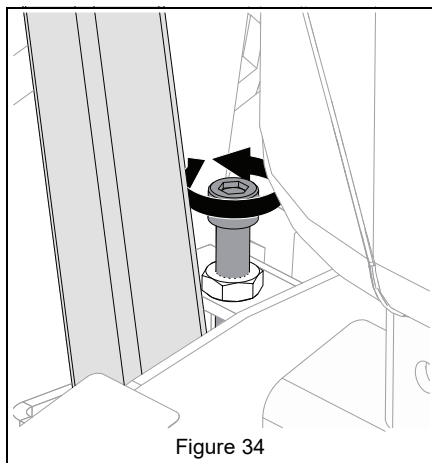


Figure 34

3. Align steering levers. See *Adjust Steering Levers* on page 26.

ELECTRICAL SERVICE

See Controls and Features on page 13 for fuse box location.

See Figure 35.

Replace Fuse


IMPORTANT: To avoid damaging the circuit, replace fuses with fuses of the same amperage rating. Determine the cause of electrical failure and repair before replacing failed electrical components.

1. Place unit in service position. See *Service Position* on page 22.
2. Remove fuse box cover.
3. Remove defective fuse.
4. Determine cause of fuse failure and repair condition.
5. Install new fuse.
6. Replace fuse box cover. Ensure cover snaps tightly in position.

Replace Relay

NOTICE: Relays are interchangeable. Use only quality replacement parts. See *Service Parts* on page 21.

1. Place unit in service position. See *Service Position* on page 22.
2. Remove fuse box cover.
3. Remove defective relay.
4. Determine cause of relay failure and repair condition.
5. Install new relay.
6. Replace fuse box cover. Ensure cover snaps tightly in position.

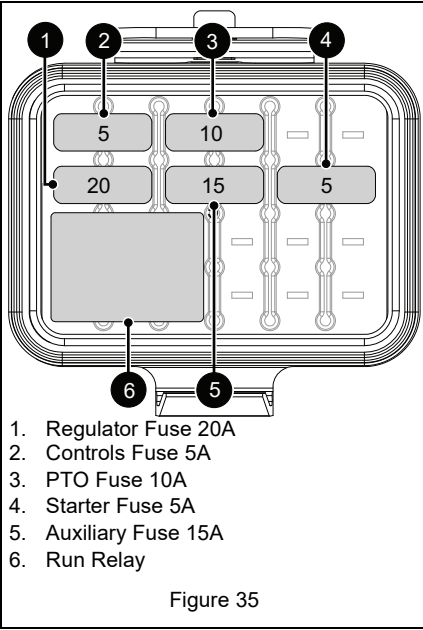

TROUBLESHOOTING

Problem	Probable Cause	Correction
Engine does not start.	Safety Interlock System is not engaged or is faulty.	Check Safety Interlock System. See <i>Check Safety Interlock System</i> on page 23.
	Fuel tank is empty.	Fill fuel tank. See <i>Before Operating Unit</i> on page 17.
	Fuel supply is contaminated.	Replace with clean fuel.
	Battery is discharged.	Charge battery. Refer to your unit's Service Manual.
	Connection between battery and battery cables is poor.	Tighten and/or clean battery and battery cables. See <i>Clean Battery</i> on page 24.
	Spark plug wire(s) are loose or spark plug(s) are faulty.	Connect spark plug wire(s) or replace spark plug(s). Refer to engine manual.
	Electrical system is faulty.	Contact your Gravely dealer.
	Engine is faulty.	Contact your Gravely dealer.
Engine runs rough.	Choke control knob is in on position. (Models 991266, 991268, 991270, 991271, 991272, 991280, 991282, 991284, 991286, 991288, 991290)	Move knob to off position.
	Air filter cartridge is plugged.	Clean or replace air filter cartridge. Refer to engine manual.
	Engine is faulty.	Contact your Gravely dealer.
Engine overheats.	Engine oil level is low.	Add engine oil. Refer to engine manual.
	Cooling fins are plugged.	Clean engine. Refer to engine manual.
	Engine is faulty.	Contact your Gravely dealer.
Unit does not drive.	The transaxles are bypassed.	Engage levers. See <i>Move Unit Manually</i> on page 20.
	Transaxle drive belt is faulty.	Contact your Gravely dealer.
	Transaxles are faulty.	Contact your Gravely dealer.
PTO malfunctions.	Operator presence switch is not engaged.	Activate switch by sitting on operator seat.
	Operator presence switch is faulty.	Contact your Gravely dealer.
	PTO belt is faulty.	Replace belt. Refer to your unit's Service Manual.
	PTO switch, wiring, connectors or clutch are faulty.	Contact your Gravely dealer.
Unit moves with engine off and parking brake engaged.	Parking brake needs adjustment.	Adjust parking brake lever. Refer to your unit's Service Manual.
	Parking brake is faulty.	Contact your Gravely dealer.
Unit does not drive straight.	Tire pressure is incorrect.	Check tire pressure. See <i>Specifications</i> on page 36.
	Steering levers need adjustment.	See <i>Adjust Steering Levers</i> on page 26.

TROUBLESHOOTING

Problem	Probable Cause	Correction
Unit creeps when steering levers are in neutral position.	Transmission and/or linkage need adjustment.	Contact your Gravely dealer.
Poor cutting quality.	Mower blades not level or mower deck pitch is incorrect.	Level and adjust pitch of mower deck. Refer to your unit's Service Manual.
	Mower blades are dull or faulty.	Sharpen or replace mower blades. Refer to your unit's Service Manual.
	Mowing speed is too fast.	Drive slower when cutting grass.
	Belt tension or condition is poor.	Replace mower belts. Refer to your unit's Service Manual.
	Cutting height is too low.	Do not set height of cut too low. For very tall grass, mow twice.
Blades do not stop within 5 seconds.	Clutch brake plates worn.	Reverse clutch brake plates. If clutch brake plates have already been reversed, replace clutch. Refer to your unit's Service Manual.

STORAGE

SHORT-TERM STORAGE

IMPORTANT: NEVER wash unit with high-pressure water or store outdoors.

1. Allow unit to cool and clean with mild soap and water.
2. Tighten all hardware to correct specifications.
3. Inspect unit for visible signs of wear or damage. Repair as needed.
4. Prepare fuel system for storage.

NOTICE: Gravely recommends using a quality fuel stabilizer in all fuel. Gasoline left in the fuel system without a stabilizer, even for short periods of time, deteriorates and leaves gummy deposits in the system that may damage the carburetor and fuel hoses, filter and tank. For the best effectiveness, add stabilizer to all fuel containers whenever purchasing fuel. Add the stabilizer to the container before adding fuel.

- a. Add fuel stabilizer (see *Service Parts* on page 21) or equivalent according to manufacturer's instructions to the fuel tank and any fuel containers with remaining fuel.
 - b. Run engine outdoors for at least 5 minutes to allow stabilizer to reach the carburetor.
5. Turn ignition key to off position and remove from ignition.
 6. Store unit in a cool, dry, protected area. DO NOT store unit outdoors.

LONG-TERM STORAGE

1. Perform short-term storage procedures.
2. Lubricate as directed in *Maintenance* on page 21.
3. Touch-up all scratched painted surfaces.
4. Remove and charge battery. Refer to your unit's Service Manual. Store battery in a cool, dry, protected area.
5. Store unit in a cool, dry, protected area. Do not store unit outdoors.

START-OF-SEASON PREPARATION

1. Before adding fuel for the first time after long-term storage, add fresh, stabilizer-treated fuel to fuel tank and any fuel containers with remaining fuel.
2. Charge and install the battery.

ACCESSORIES

See your Gravely dealer for a complete list of compatible accessories and attachments for your unit.

Description	Part No.
Mulch Kit – 44"	79109500
Mulch Kit – 48"	79109600
Mulch Kit – 52"	79220200
Mulch Kit – 60"	79109800
Light Operator Seat Spring Kit	79107000
Seat Suspension Kit (Includes Seat) (Models 921266, 921268, 921270, 921272, 921274, 921276, 921278, 921280, 921282, 921284)	79107700
Seat Suspension Kit (Models 921266, 921268, 921270, 921272, 921274, 921276, 921278, 921280, 921282, 921284)	79108800
Bagger Attachment Kit (Models 991266, 991268, 991270, 991271, 991272, 991274, 991276, 991278)	79107800
Flex Fork Suspension Kit (Models 991266, 991268, 991270, 991271, 991272, 991274, 991276, 991278)	79108300
Headlight Kit (Models 991266, 991268, 991270, 991272, 991274, 991276, 991278, 991280, 991282, 991284, 991286, 991288, 991290)	79108600
Operator Controlled Discharge Baffle Rod Retainer Kit	79110000
Hitch Kit	79108500
Striper Kit	79206700
Operator Controlled Discharge Baffle Kit (Requires 79108700)	79215400
Rollover Protection Structure (ROPS) Kit (Models 991266, 991268, 991270, 991271, 991272, 991274, 991276, 991278)	89101100
22" Rear Tweel Kit	79109900

Bagger Kits*	Part No.
Base Kit	89100800
• Completing kit for 44" Decks	79109200
• Completing kit for 48" Decks	79109200
• Completing kit for 52" Decks	79109300
• Completing kit for 60" Decks	79109400
<p>* Bagger kits are ordered in two parts. Complete baggers require Base Kit 89100800 <i>plus</i> the kit matching the deck size of the unit.</p> <p>* Install bagger attachment kit (79107800) if unit does not have a ROPS.</p>	

SPECIFICATIONS

Model Number	991266	991268	991270	991271
Description	ZT HD 44	ZT HD 48	ZT HD 52	
Engine	Kawasaki FR			
Engine Displacement – cm ³ (in ³)	726 (44.3)			
Maximum RPM – No Load	3600 ± 100			
Oil Capacity	Refer to engine manual.			
Liquid or Air Cooled	Air			
Transmission				
Type	Hydro-Gear ZT3100			
Oil	15W-50 Full-Synthetic Hydraulic Fluid (Gravely p/n 00057100) or equivalent			
Hydraulic Oil Filter	Yes			
Drive				
Forward Maximum – km/h (mph)	12.9 (8)			
Reverse Maximum – km/h (mph)	6.4 (4)			
Turning Radius	Zero			
Brakes	Parking			
Electrical				
Starter	Electric			
Battery	12-Volt 12A-190 CCA (U1 Replaceable)			
PTO (Power Take-off)	Electric PTO Clutch / Brake			
Fuel				
Fuel Tank Capacity – Liter (gal)	19.3 (5.1)			
Type	See Engine Manual			
Size and Weight				
Length – cm (in)	200.7 (79)			
Width – cm (in)	149.9 (59)	160 (63)	170.2 (67)	
Height – cm (in)	119.4 (47)			
Weight – kg (lbs)	365.1 (805)	374.2 (825)	385.6 (850)	
Tires				
Front Tire Size – in	13 x 6.5-6			
Rear Tire Size – in	22 x 10-12		22 x 10.5-12	22 x 11-12
Recommended Front Tire Pressure – kPa (psi)	137.9 – 172.4 (20 – 25)			
Recommended Rear Tire Pressure – kPa (psi)	82.7 – 103.4 (12 – 15)			
Mower Deck				
Cutting Height – cm (in)	3.8 – 12.7 (1.5 – 5.0)			
Cutting Height Increments	0.635 (0.25)			
Cutting Width – cm (in)	111.8 (44)	121.9 (48)	132.1 (52)	
Mower Deck Lift	Mechanical Pin Lock			

SPECIFICATIONS

Model Number	991272	991274	991276	991278
Description	ZT HD 60	ZT HD 48	ZT HD 52	ZT HD 60
Engine	Kawasaki FR	Kohler 7000 Pro		
Engine Displacement – cm ³ (in ³)	726 (44.3)	725.0 (44.2)		
Maximum RPM – No Load	3600 ± 75			
Oil Capacity	Refer to engine manual.			
Liquid or Air Cooled	Air			
Transmission				
Type	Hydro-Gear ZT3100			
Oil	15W-50 Full-Synthetic Hydraulic Fluid (Gravely p/n 00057100) or equivalent			
Hydraulic Oil Filter	Yes			
Drive				
Forward Maximum – km/h (mph)	12.9 (8)			
Reverse Maximum – km/h (mph)	6.4 (4)			
Turning Radius	Zero			
Brakes	Parking			
Electrical				
Starter	Electric			
Battery	12 Volt 12A-190 CCA (U1 Replaceable)			
PTO (Power Take-off)	Electric PTO Clutch / Brake			
Fuel				
Fuel Tank Capacity – Liter (gal)	19.3 (5.1)			
Type	See Engine Manual			
Size and Weight				
Length – cm (in)	200.7 (79)			
Width – cm (in)	190.5 (75)	160 (63)	170.2 (67)	190.5 (75)
Height – cm (in)	119.4 (47)			
Weight – kg (lbs)	394.6 (870)	374.2 (825)	385.6 (850)	394.6 (870)
Tires				
Front Tire Size – in	13 x 6.5-6			
Rear Tire Size – in	22 x 12-12	22 x 10-12	22 x 10.5-12	22 x 12-12
Recommended Front Tire Pressure – kPa (psi)	137.9 – 172.4 (20 – 25)			
Recommended Rear Tire Pressure – kPa (psi)	82.7 – 103.4 (12 – 15)			
Mower Deck				
Cutting Height – cm (in)	3.8 – 12.7 (1.5 – 5.0)			
Cutting Height Increments	0.635 (0.25)			
Cutting Width – cm (in)	152.4 (60)	121.9 (48)	132.1 (52)	152.4 (60)
Mower Deck Lift	Mechanical Pin Lock			

SPECIFICATIONS

Model Number	991280	991282	991284
Description	Pro-Turn Z48	Pro-Turn Z52	Pro-Turn Z60
Engine	Gravely		
Engine Displacement – cm ³ (in ³)	764 (46.6)		
Maximum RPM – No Load	3600 ± 100		
Oil Capacity	Refer to engine manual.		
Liquid or Air Cooled	Air		
Transmission			
Type	Hydro-Gear ZT3100		
Oil	15W-50 Full-Synthetic Hydraulic Fluid (Gravely p/n 00057100) or equivalent		
Hydraulic Oil Filter	Yes		
Drive			
Forward Maximum – km/h (mph)	12.9 (8)		
Reverse Maximum – km/h (mph)	6.4 (4)		
Turning Radius	Zero		
Brakes	Parking		
Electrical			
Starter	Electric		
Battery	12-Volt 12A-190 CCA (U1 Replaceable)		
PTO (Power Take-off)	Electric PTO Clutch / Brake		
Fuel			
Fuel Tank Capacity – Liter (gal)	19.3 (5.1)		
Type	See Engine Manual		
Size and Weight			
Length – cm (in)	200.7 (79)		
Width – cm (in)	160 (63)	170.2 (67)	190.5 (75)
Height – cm (in)			
• with ROPS extended	182.9 (72.0)		
• with ROPS folded	132.1 (52.0)		
Weight – kg (lbs)	419.1 (924)	421.8 (930)	431.8 (952)
Tires			
Front Tire Size – in	13 x 6.5-6		
Rear Tire Size – in	22 x 10-12	22 x 10.5-12	22 x 12-12
Recommended Front Tire Pressure – kPa (psi)	137.9 – 172.4 (20 – 25)		
Recommended Rear Tire Pressure – kPa (psi)	82.7 – 103.4 (12 – 15)		
Mower Deck			
Cutting Height – cm (in)	3.8 – 12.7 (1.5 – 5.0)		
Cutting Height Increments	0.635 (0.25)		
Cutting Width – cm (in)	121.9 (48)	132.1 (52)	152.4 (60)
Mower Deck Lift	Mechanical Pin Lock		

SPECIFICATIONS

Model Number	991286	991288	991290
Description	Pro-Turn ZX 48	Pro-Turn ZX 52	Pro-Turn ZX 60
Engine	Kawasaki FX 691V		Kawasaki FX 730V
Engine Displacement – cm ³ (in ³)	726 (44.3)		
Maximum RPM – No Load	3600 ± 100		
Oil Capacity	Refer to engine manual.		
Liquid or Air Cooled	Air		
Transmission			
Type	Hydro-Gear ZT3200		
Oil	15W-50 Full-Synthetic Hydraulic Fluid (Gravely p/n 00057100) or equivalent		
Hydraulic Oil Filter	Yes		
Drive			
Forward Maximum – km/h (mph)	14.0 (8.7)		
Reverse Maximum – km/h (mph)	6.4 (4)		
Turning Radius	Zero		
Brakes	Parking		
Electrical			
Starter	Electric		
Battery	12-Volt Maintenance-Free, 300 CCA 10U1L		
PTO (Power Take-off)	Electric PTO Clutch / Brake		
Fuel			
Fuel Tank Capacity – Liter (gal)	19.3 (5.1)		
Type	See Engine Manual		
Size and Weight			
Length – cm (in)	200.7 (79)		
Width – cm (in)	160 (63)	170.2 (67)	190.5 (75)
Height – cm (in)			
• with ROPS extended	182.9 (72.0)		
• with ROPS folded	124.5 (49.0)		
Weight – kg (lbs)	419.1 (924)	421.8 (930)	431.8 (952)
Tires			
Front Tire Size – in	13 x 6.5-6		
Rear Tire Size – in	22 x 10-12	22 x 10.5-12	22 x 12-12
Recommended Front Tire Pressure – kPa (psi)	137.9 – 172.4 (20 – 25)		
Recommended Rear Tire Pressure – kPa (psi)	82.7 – 103.4 (12 – 15)		
Mower Deck			
Cutting Height – cm (in)	3.8 – 12.7 (1.5 – 5.0)		
Cutting Height Increments	0.635 (0.25)		
Cutting Width – cm (in)	121.9 (48)	132.1 (52)	152.4 (60)
Mower Deck Lift	Mechanical Pin Lock		



GRAVELY

Outdoor Power Equipment Limited Warranty

AriensCo warrants to the original purchaser that Gravely brand products purchased on or after 09/01/2022 will be free from defects in material and workmanship for the time period noted in the chart below.

If any product is rented or leased, then the duration of these warranties shall be 90 days after the date of purchase.

An authorized Gravely dealer will repair any defect in material or workmanship, and repair or replace any defective part, subject to the conditions, limitations and exclusions set forth herein. Such repair or replacement will be free of charge (labor and parts) to the original purchaser; except as noted below. Pick-up and delivery are at the owner's expense.

The warranty code is found on the model and serial number identification label on the unit.

Warranty Code	Product Group	Warranty Period
AA	Serialized Attachments	1 Year.
AB	Serialized Attachments	2 Years.
CH	Pro-Turn Z and Pro-Turn ZX Mowers	4 Years or 750 Hours.*
CJ	Pro-QXT	4 Years or 500 Hours.*
CK	Compact-Pro and Pro-Walk Hydro Mowers	4 Years or 750 Hours.* No Hour Limit for First 2 Years.
CL	Pro-Turn 100 and Pro-Stance Mowers	5 Years or 1000 Hours.* No Hour Limit for First 2 Years.
CM	Pro-Turn 200 and 300 Mowers	5 Years or 1250 Hours.* No Hour Limit for First 2 Years.
CN	Pro-Turn 500, 600 and Mach-One Mowers	5 Years or 1500 Hours.* No Hour Limit for First 2 Years.
CS	Axis Skidsteer	1 Year or 1000 Hours.*
HF	ZT-X Mowers	3 Years or 300 Hours.*
HG	ZT-XL Mowers	4 Years or 400 Hours.*
HH	ZT-HD and Z-Stance Mowers	4 Years or 500 Hours.*
UG	Atlas JSV	1 Year.

* Whichever comes first.

Special Extensions

The chart below details special **extensions** to warranty terms. Warranty terms are total time periods covered. If any product is rented or leased, there are no extensions to the 90-day warranty.

Warranty Code	Warranty Term Extension	Warranty Period	Detail
CL, CM, CN	Mower Deck Shell and Main Frame	Lifetime Limited.	Warranty is for parts only after the initial warranty period. Components are covered for manufacturer's defect only, not wear.

Exclusions and Limitations

The charts below detail special **exclusions and limitations** to this warranty.

Warranty Term Exclusions	Warranty Period
Air filters, brake arms, brake linings, brake shoes, brushes, cutters, fuel filters, halogen headlights, knives, halogen light bulbs, lubricants, mower blades, oil, oil filters, spark plugs, scraper blades, shear bolts, skid shoes and spoon tines.	Components are not covered under warranty.

Hydro-Gear Transaxle Limitation
See Hydro-Gear warranty. The warranty is administrated by AriensCo. Refer to www.gravely.com for warranty statement.

Warranty Term Limitations	Warranty Period
Cloth, Plastic and Rubber Components. Mufflers, Tires and Belts.	Components are covered for manufacturer's defect only, not wear.

Exclusions – Items Not Covered by This Warranty

- Parts that are not genuine Gravely service parts are not covered by this warranty and may void the warranty if the parts result in premature wear or damage to the product.
- Damages resulting from the installation or use of any part, accessory, or attachment which is not approved by the AriensCo for use with product(s) identified herein are not covered by this warranty.
- Any misuse, alteration, improper assembly, improper adjustment, neglect, or accident which requires repair is not covered by this warranty.
- Repairs or adjustments required due to failure to use fresh fuel or failure to properly prepare the unit for periods of non-use.
- **Use of gasoline blends exceeding 10% ethanol voids any and all warranties.**
- **Any tampering with the hour meter voids any and all warranties.**
- Products are designed to the specifications in the area that the product was originally distributed. Different areas may have significantly different legal and design requirements. This warranty is limited to the requirements in the area in which the unit was originally distributed. AriensCo does not warrant this product to the requirements of any other area. Warranty service is limited to service within the area originally distributed.
- In countries other than the United States and Canada, contact the AriensCo dealer for warranty policies that govern within your country. Rights may vary from country to country and within any one country.

Evaporative Emissions Control Warranty Exception

As required by the California Air Resources Board (CARB) and the US Environmental Protection Agency (EPA) the evaporative emissions control system is warranted to the ultimate purchaser, and any subsequent owner, for two years.

The CARB and EPA evaporative emissions control system warranty is described in a separate evaporative emission control warranty statement.

Special Exclusions for Job-site Vehicles

The following uses void the warranty terms on Atlas JSV (Warranty Code UG) vehicles:

- Renting or leasing the vehicle.
- Using the vehicle to tow or carry loads in excess of the limits specified in the operator's manual.
- Modifying the vehicle with parts and accessories that are not genuine or authorized Gravely parts or accessories.
- Modifying the vehicle without express written authorization from Gravely.
- Operating the vehicle when it has not been completely and properly assembled and pre-delivered by an authorized Gravely dealer.

Battery Warranty

Battery warranty is one year. Units used for rental or lease have no exceptions to the 90-day warranty. Total battery claim reimbursement will not exceed 45.00 USD.

Engines

The chart below details engine warranty information. Engine warranty terms may vary from the specific terms of this warranty. If inconsistent, the terms of the engine warranty shall apply to the engine and its component parts.

Engine Manufacturer	Detail	
Gravely V-Twin	Serial Number 0000400 and lower	4 Years or 500 Hours, whichever comes first. Refer to www.gravely.com for warranty statement.
	Serial Number 0000401 and higher	4 Years or 750 Hours, whichever comes first. Refer to www.gravely.com for warranty statement.
Yamaha	Yamaha-branded engines are warranted by the manufacturer and the warranty is administrated by AriensCo. Refer to www.gravely.com for warranty statement.	
Briggs & Stratton, Kawasaki, Kohler, Kubota	Covered by the engine manufacturer's warranty. Refer to the engine manufacturer's warranty statements.	

Parts and Accessories

Service replacement parts and non-serialized accessories are warranted for 90 days from date of purchase. Labor is not included.

Customer Responsibilities

Register the product immediately at the time of sale. If the dealer does not register the product, the customer must register the unit on-line at www.gravely.com.

To obtain warranty service, the **original purchaser** must:

- Ensure that the maintenance and adjustments explained in the Operator's Manual are routinely completed.
- Promptly notify AriensCo or an authorized Gravely service representative of the need for warranty service.
- Transport the product to and from the place of warranty service at owner's expense.
- Have the warranty service performed by an authorized Gravely service representative.

To find an authorized dealer use the dealer locator on our websites, or contact us by mail or phone.

Globally except Australia or New Zealand:	Australia:	New Zealand:
AriensCo 655 W. Ryan Street Brillion, WI 54110 Phone: (920) 756 - 4688 www.gravely.com	Roy Gripske & Sons Pty Ltd 11 Sodium Street Narangba Queensland 4504 Australia Phone: (61130) 036 3004 www.rgs.com.au	Masport Ltd 320 Ti Rakau Drive East Tamaki Auckland 2013 New Zealand Phone: 0800 627 7678 www.masport.co.nz

Disclaimer

AriensCo may from time to time change the design of its products. Nothing contained in this warranty shall be construed as obligating the AriensCo to incorporate such design changes into previously manufactured products, nor shall such changes be construed as an admission that previous designs were defective.

Limitation of Remedy and Damages

AriensCo liability under this warranty, and under any implied warranty that may exist, is limited to repair of any defect in workmanship, and repair or replacement of any defective part. AriensCo shall not be liable for incidental, special, or consequential damages (including lost profits). Some states do not allow the exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

AriensCo shall not be held liable for damages, including premature wear and tear, or injuries caused by installation of unauthorized parts and accessories or for parts and accessories not installed by an authorized Gravely dealer.

Australian Consumer Law

The following applies solely to warranties subject to Subsection 102(1) of the Australian Consumer Law: Our goods come with guarantees that cannot be excluded by the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

Disclaimer of Further Warranty

AriensCo makes no warranty, express or implied, other than what is expressly made in this warranty. If the law of your state provides that an implied warranty of merchantability, or an implied warranty of fitness for particular purpose, or any other implied warranty, applies to AriensCo then any such implied warranty is limited to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from region to region.



655 West Ryan Street
Brillion, WI 54110

www.gravely.com



ARIENS|CO

